

Instructions

Herman SHY3 Signe Hytte 2022



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Safety precautions

- Dispose of plastic bag from packaging immediately and keep out of reach of children.
- The lamp is only intended for interior use.
- Do not place the cable within reach of small children or anywhere there is a risk of it becoming a trip hazard.
- If the external cable or cord of the lamp is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid any potential hazards.
- Consult a professionally qualified electrician if in any doubt.
- Keep the product well out of reach of children.

Cleaning instructions

- Wipe surface of the shade with a dry cloth.
- Do not use any abrasive cleaning tools such as steel wool, scouring sponges or stiff brushes.
- Never use strong cleaning agents such as white spirit, turpentine, household glass cleaner or cellulose thinners.

For indoor use only
E14 maximum 25W (dimmable)
Bulb not included




 

Contents

A Lamp

B Lamp holder ring

C Glass shade

(comes in seperate box)

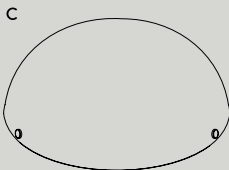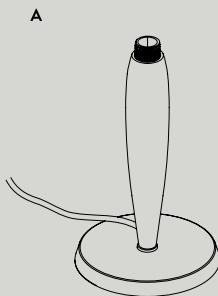

Tools needed


- Bulb type E14 (dimnable)

&Tradition®

Please follow steps 1 to 3 to assemble the product.

Step 1 / 3


Carefully place the shade onto the wooden lamp base.

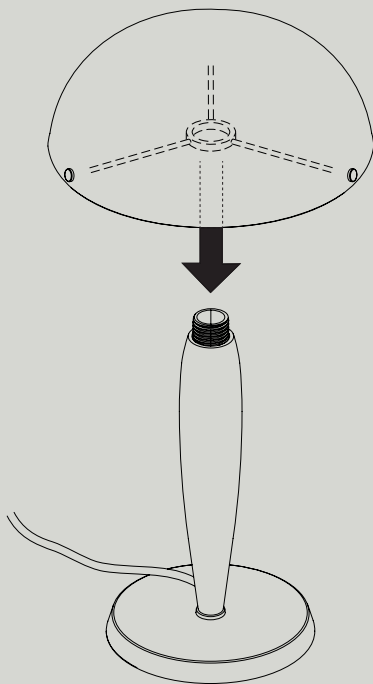

&Tradition®

Step 2 / 3


Place the lamp holder ring over lamp base and screw in on the socket to secure the shade.

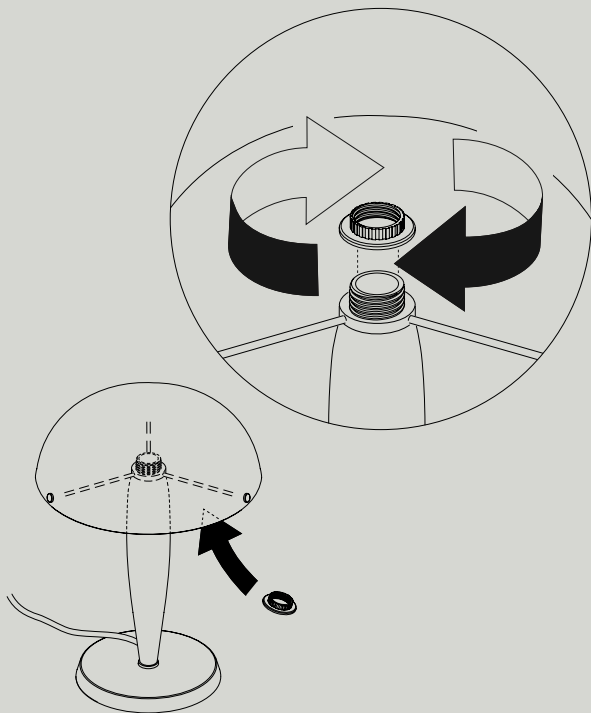

&Tradition®

Step 3 / 3

Place the light bulb on the socket and ensure that it sits tight.

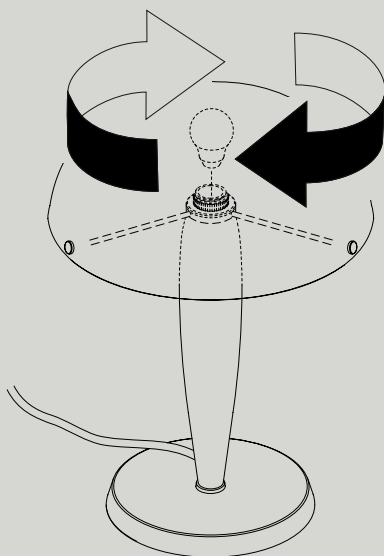

&Tradition®

