


ASSEMBLY INSTRUCTIONS

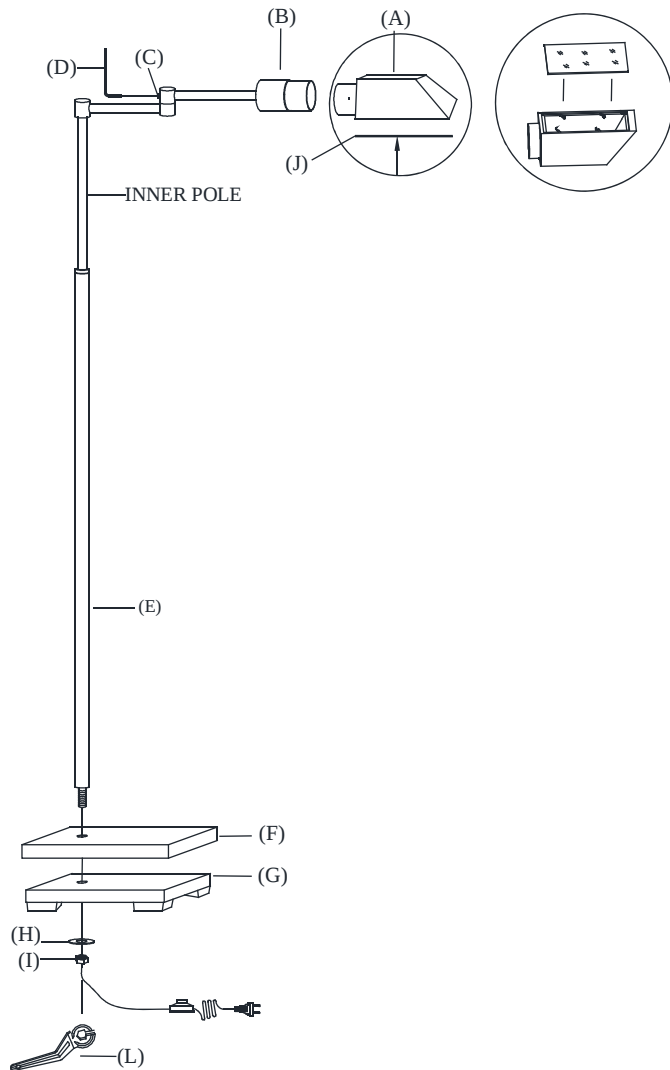

Marske Adjustable Floor Lamp Item # 81134 -EU

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Join parts (E), (F) & (G) together by tightening washer (H) & nut (I) to threaded nipple of pole (E). Tighten with wrench (L) provided.
3. Pull the wire until taut.
4. Remove the desiccant from the socket.
5. Attach the handle of shade (A) to socket tube (B).
6. Insert light bulb into lampholder.
7. Attach glass shield (J) into bottom of shade (A) and tighten it as shown.
7. Plug lamp into wall outlet.

ADJUSTMENT INSTRUCTIONS

1. Loosen set screw (C) by allen wrench (D) provided.
2. To adjust the height of lamp fixture, hold the lower pole steadily, pulling or pushing upper inner pole up or down to desired height and swing lamp arm to desired position.
3. Tighten set screw (C).

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.