


ASSEMBLY INSTRUCTIONS

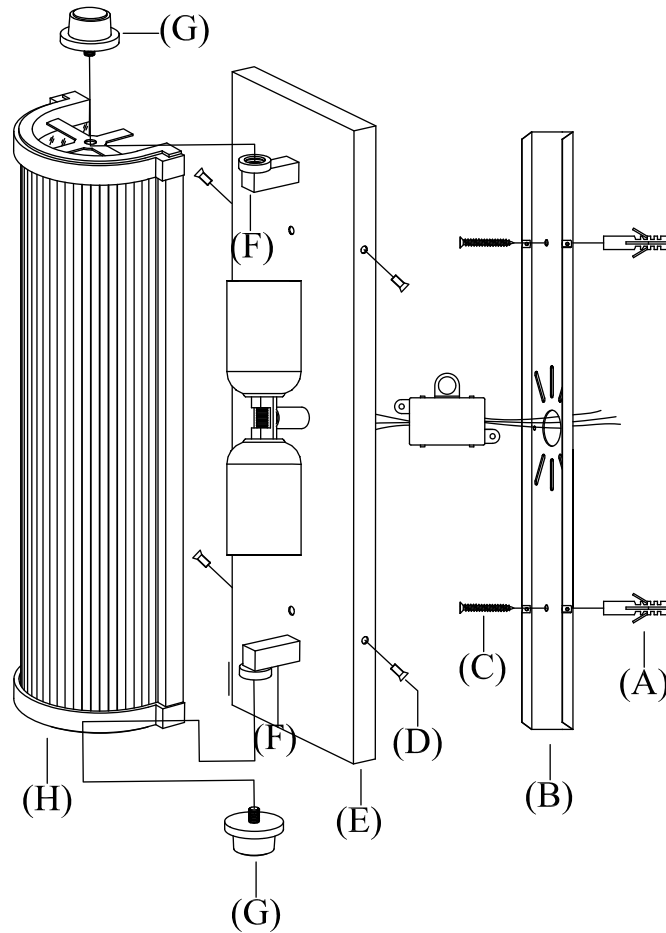

Long Dresser Glass Rod Light

Item # TOB 2141 -EU

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Remove mounting plate (B) from base of light fixture (E) by removing base screws (D) in counter-clockwise direction.
3. Place mounting plate (B) on the wall, use it as a template, mark center points for both mounting slots for mounting plate on the wall. Remove mounting plate (B).
4. Drill small holes on the marked location, the holes should be big enough to accommodate with plastic anchors (A). Push plastic anchors (A) into the holes.
5. Affix mounting plate (B) to wall outlet box, insert mounting screws (C) to plastic anchors (A) to secure mounting (B) to the wall.
6. Connect ground (usually green) outlet wire to ground (green) side of terminal block by loosening set screw, inserting outlet wire and tightening set screw. The terminal block is attached at backside of fixture base (D).
7. Connect neutral (usually blue) outlet wire to neutral (blue) side of terminal block by loosening set screw, inserting outlet wire and tightening set screw. The terminal block is attached at backside of fixture base (D).
8. Repeat the procedure with the hot (brown) outlet wire to hot side of terminal block. Always make sure that no wire strands are left outside the terminal block. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
9. Attach fixture base (E) to the affixed mounting plate (B) and tighten with base screws (D).
10. Insert the specified light bulbs into lampholders.
11. Remove end caps (G) from shade holders (F), attach glass shade (H) to fixture base (E) by aligning the holes on shade holders (F), replace end caps (H) to secure the glass shade to the fixture.
12. Restore power and test fixture. Installation is completed.

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.