
instruction manual tramonto 01

valerie_objects

V9022100

 
luminaire specs
TYPE wall lamp
SWITCH remote dimmable handswitch
BULB led strip 8 watt/meter - 2500lm- cri95
IP 20
plug (Type F) for wall socket connection

 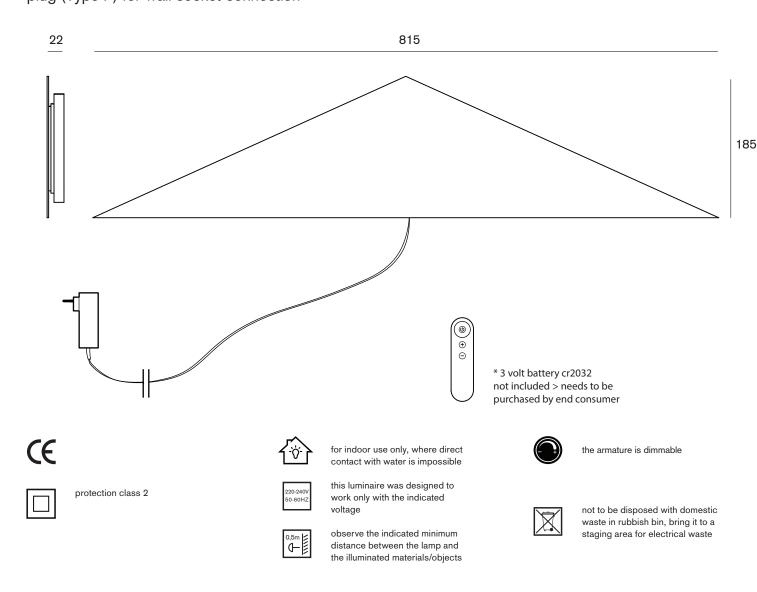


 
safety directions

Please read the instruction manual carefully before installing or using this product. Keep this user manual for further reference / two persons needed for installation.

- 1. The luminaires may only be installed by authorized and qualified technicians according valid regulations for electrical istallation.
- 2. Maintenance of the luminaires is limited to their surfaces. During maintenance no moisture should come into contact with any areas of the terminal connections or voltage control parts.
- 3. Take account of the minimal separation distance from other objects and the room required around the fitting.
- 4. If in any doubt, consult a professional, taking local installation requirements into account. Some countries stipulate that lighting may be installed only by registered installers.
- 5. Clean with a clean, dry cloth or brush, use no solvents or abrasives. Avoid dampness on all electrical components.
- 6. Take account of all available technical information.
- 7. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufaturer or his service agent or a similar qualified person in order to avoid a hazard.












1x remote control with dim function

 * determine the preferred position of your Tramonto wall lamp 01



* drill 3 connection holes > follow indicated grid

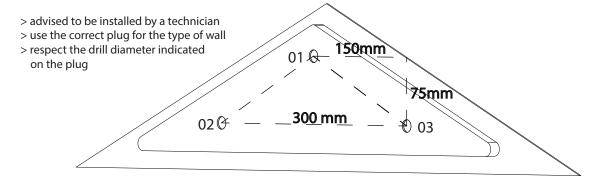


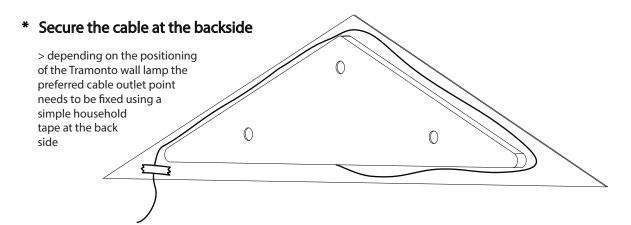

* activate the remote control

step **01** / activate remote control by inserting the requested 3 volt battery type cr2032 (battery not included in packaging)

step **02** /plug the lamp in the wall socket (compatible with plug type F)

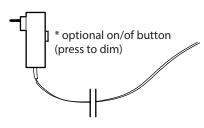

step **03** / the first 10 seconds push from top to down 1 > 2 > 3 on the remote control.

A blinking signal indicates the lamp is connected with the remote control.

