



BLIEK ROUND petit 1.0

INSTALLATION INSTRUCTIONS | JANUARY 2022

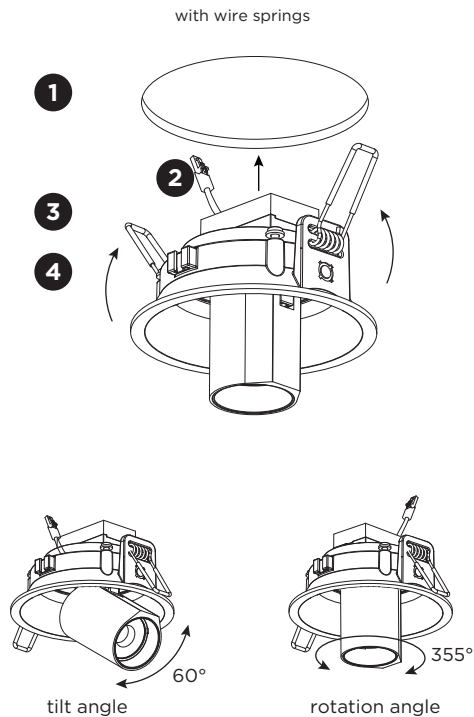


Driver must be powered off before connecting cables.

 Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.




DIMENSIONS

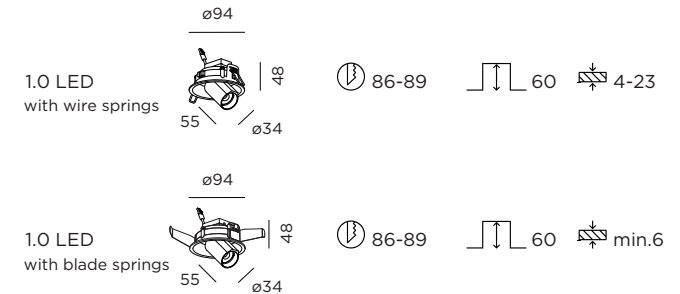


MOUNTING INSTRUCTION

 - 1 Make a hole in the ceiling according to the prescribed dimensions.
- 2 **POWER CONNECTION**
Always use a driver according to the specifications of the LED module.






SERIAL CONNECTION

 

- 3 For wire spring version: push the springs up and insert the fixture in the ceiling hole.
For blade spring version: press the springs close to the fixture and insert the fixture in the ceiling hole.

BLIEK ROUND petit 1.0

INSTALLATION INSTRUCTIONS | JANUARY 2022

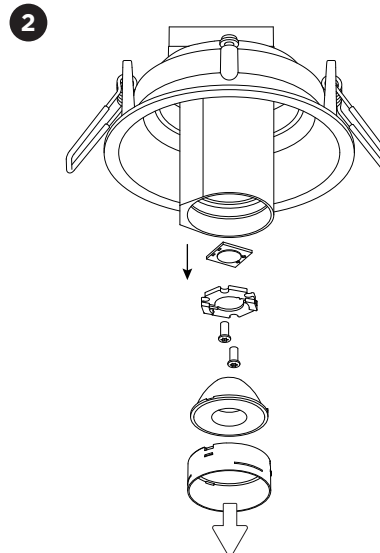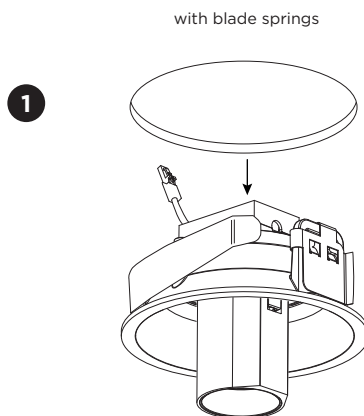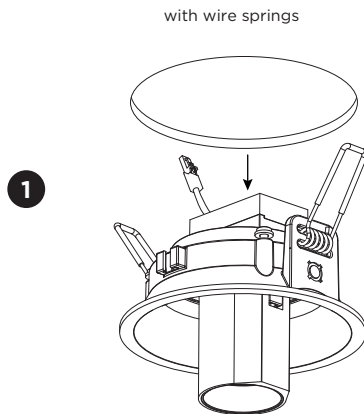


DISMOUNTING INSTRUCTION

Light Source

- 1 Take the luminaire out of the ceiling hole and disconnect the wires.
- 2 Dismount the lens holder and all parts behind to remove the COB module.



 To replace the light source please contact your W&D customer service.



This luminaire contains a light source with the energy class G.