



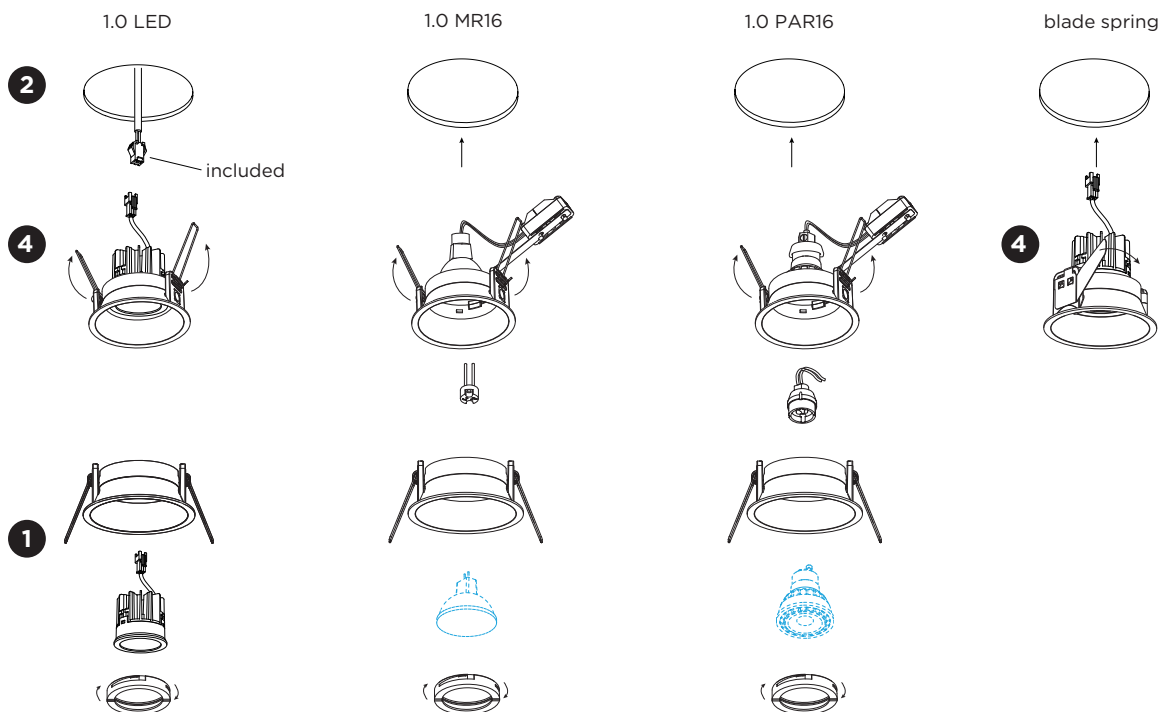


DIMENSIONS

Wire springs:

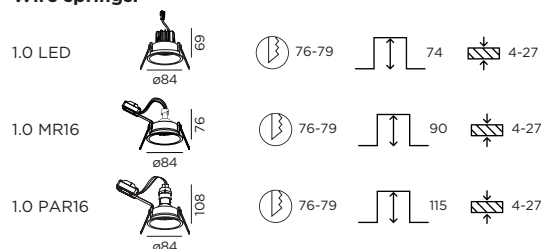

Blade springs:

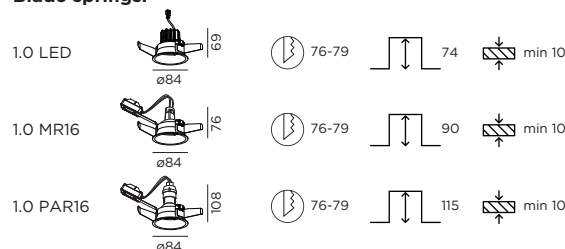

MOUNTING INSTRUCTION

1 Put the light source in the assembly set by locking the lamp ring in the housing by turning it a quarter clockwise.

2 Make a hole in the ceiling according to the prescribed dimensions.

 
3 POWER CONNECTION

LED Always use a driver according to the specifications of the LED module.

Single connection



Multiple connection




PAR16/MR16

Single connection



 Multiple connection




4 For wire springs:
Push the springs upwards and insert the fixture in the ceiling hole.


For blade springs:
Push the springs towards the fixture when inserting the fixture in the ceiling hole.



Driver must be powered off before connecting the cables.

 Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



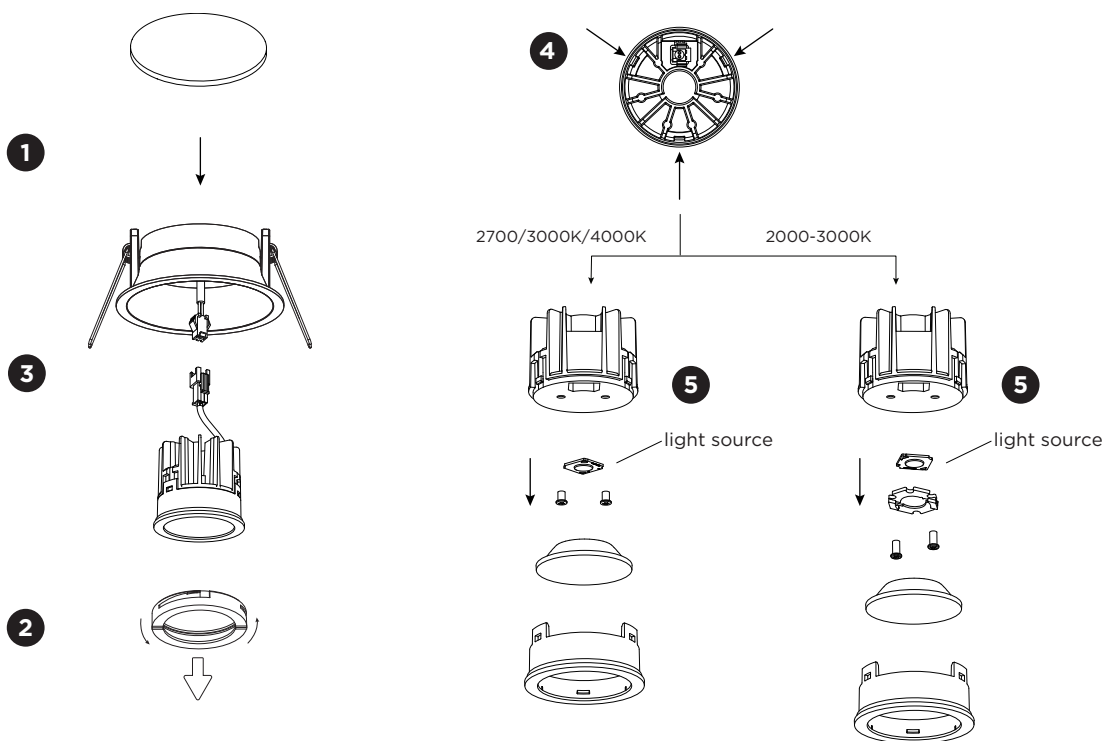

DISMOUNTING AND RECYCLING INSTRUCTIONS only for 1.0 LED Light source

- 1 Remove the fixture from the ceiling.
- 2 Hold and turn the front ring a quarter counterclockwise to remove the LED module.
- 3 Unplug the LED module to remove it from the luminaire.
- 4 Unclip the front ring at the three points.
- 5 Take the lens out and unscrew the holder or light source to remove the light source.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



This luminaire contains a light source with the energy class D.

