


RAY CEILING

INSTALLATION INSTRUCTIONS | MAY 2023


1.0 LED

1.0 PAR16


base dimensions:

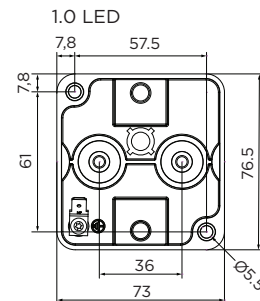

1.0 PAR16

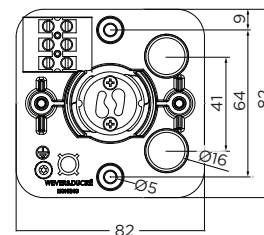

DIMENSIONS

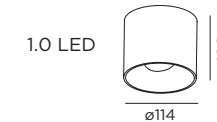

MOUNTING INSTRUCTION

- For LED: remove the mounting base from the LED module by loosening the socket screws and mount it on the ceiling with screws (screws are not included).
For PAR16: directly mount the mounting base on the ceiling with screws (screws are not included).

 
 
 
2 POWER CONNECTION

Connect to 220-240V.


Connect the earth cable.

PAR16 version

LED version



 For LED: always use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.



- For LED: attach the LED housing on the base by fixing the two socket screws.
- For LED: attach the cover to the LED housing by screwing the locking ring.
For PAR16: attach the cover to the base by screwing the locking ring.
- OPTIONAL:**
Inner cover: put the inner cover in the outer cover by screwing.
With inner cover: max. 10W. (In this case the locking ring is no longer needed.)

Always use a matching grommet in the overview table.

	A	B	C
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ²	2or3x 0.75mm ² 2x 1.0mm ²	0.75mm ² 1.5mm ²




WEVER & DUCRÉ
LIGHTING

WEVER & DUCRÉ BV
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com

PB19-010-428-00_v4


RAY CEILING

INSTALLATION INSTRUCTIONS | MAY 2023

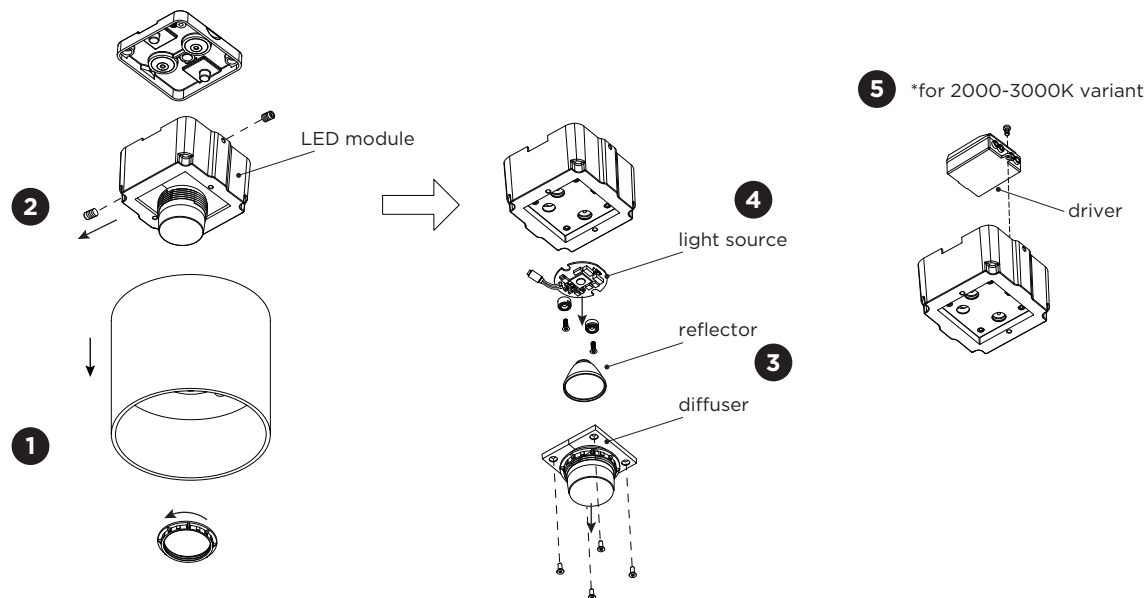


DISMOUNTING AND RECYCLING INSTRUCTIONS only for 1.0 LED Light source & driver*

 1. Unscrew the locking ring or inner cover and remove the cover.
2. Remove the two socket screws and disconnect the wires to dismount the LED module from the base.
3. Loosen the screws and remove the diffuser and reflector.
4. Disconnect the wires, loosen the screws and remove the light source.
5. *For 2000-3000K variant: Loosen the wires and unscrew the driver to remove it.



 The light source is replaceable by an authorized professional.
For advice contact your Wever & Ducré customer service contact point.



The driver can be replaced by the end user.*

This luminaire contains a light source with the corresponding energy class:

colour temperature	Energy class
3000K	A ↑ G D
2700K 2000-3000K	A ↑ G F

*only applicable on the 2000-3000K variant