



FINLIN ROUND

INSTALLATION INSTRUCTIONS | OCTOBER 2023

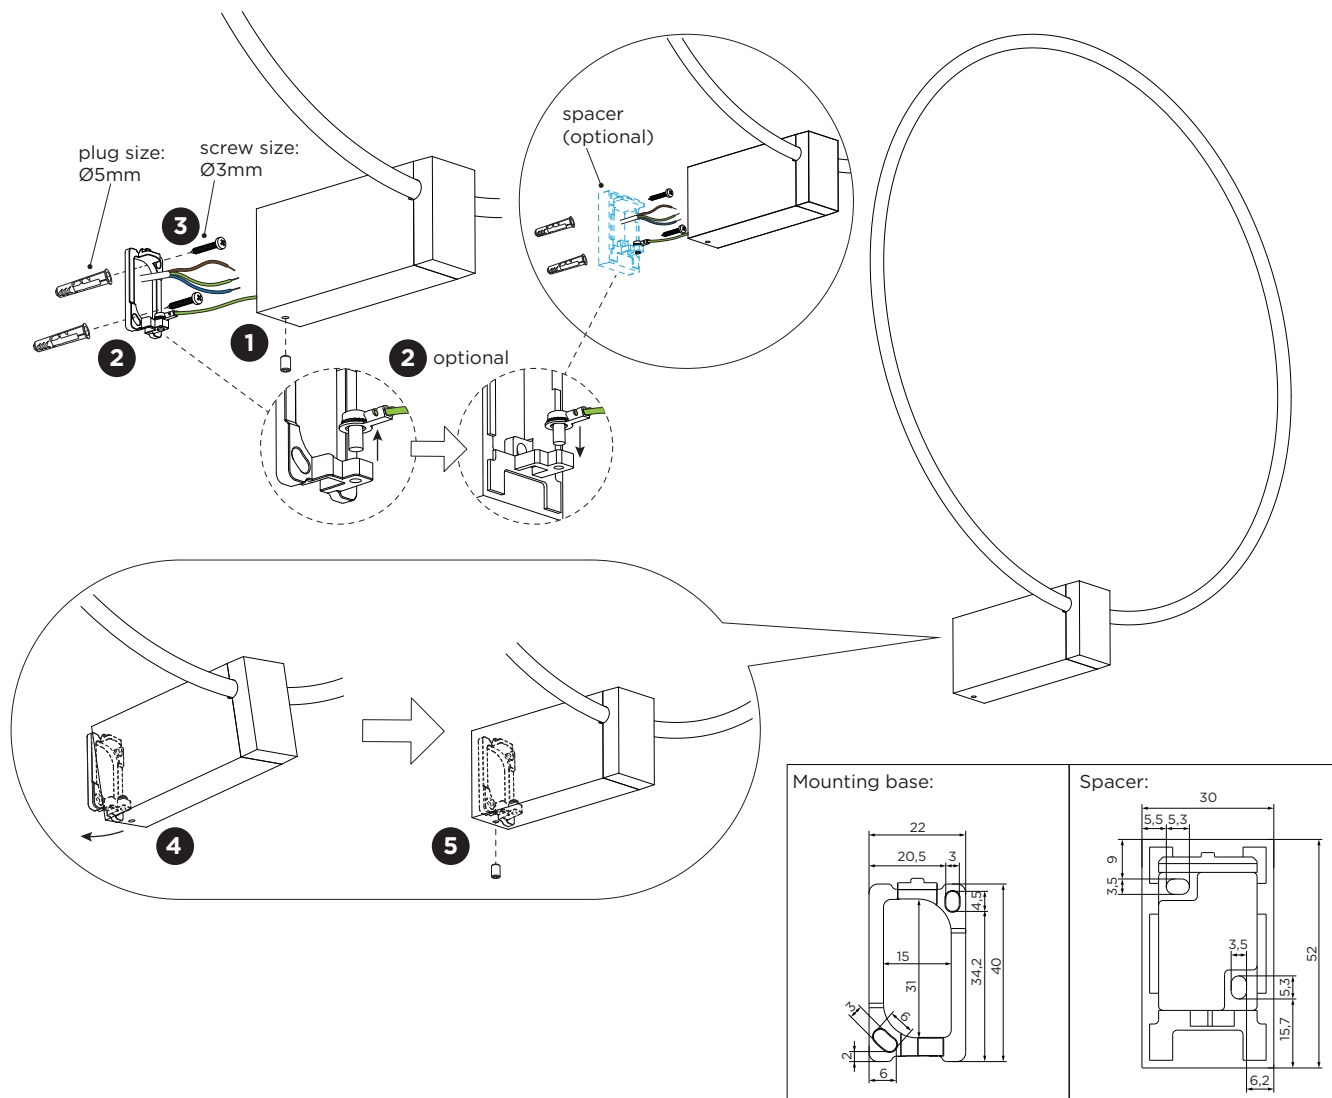

DIMENSIONS

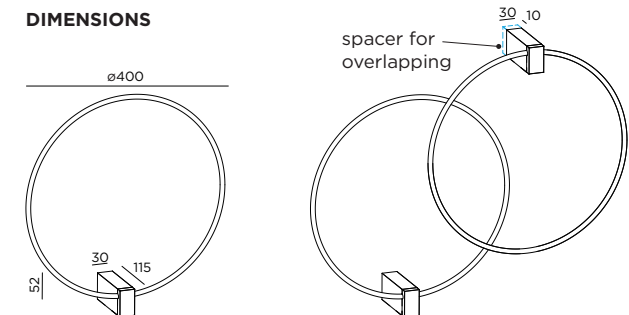

MOUNTING INSTRUCTION


- 1 Remove the mounting base from the luminaire by loosening the socket screw.
- 2 Mount the base on the wall with the screws (included).

Optional spacer (not included):

Remove the screw, the locking washer and the grounding cable from the mounting base and fix it on the spacer. Mount the spacer on the wall with the screws (included).

3 POWER CONNECTION





Connect to 220-240V.

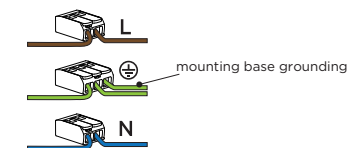

- 4 Attach the luminaire to the mounting base (or spacer) with the upper side first and tilt towards the wall.
- 5 Fix the luminaire on the base (or spacer) with the socket screw.

FINLIN ROUND


INSTALLATION INSTRUCTIONS | OCTOBER 2023

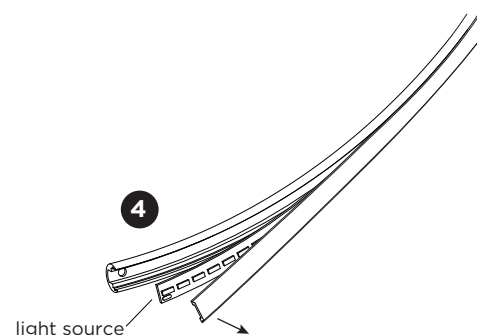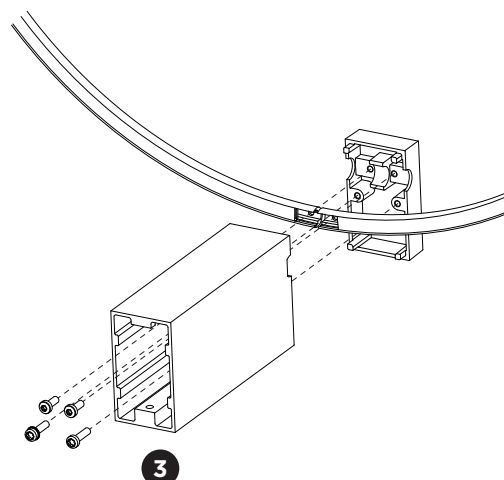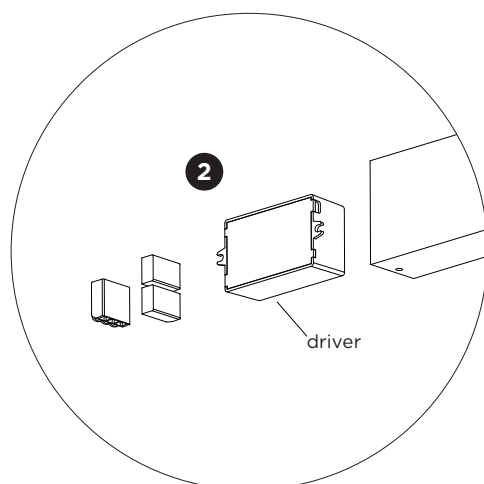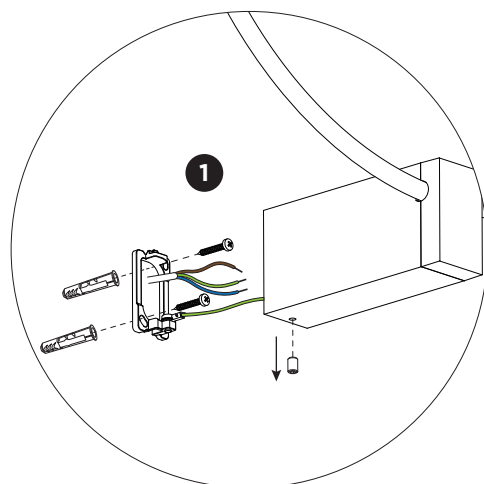


DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

 - 1 Remove the luminaire from the mounting base by loosening the socket screw and disconnecting the wires.
- 2 Disconnect the wires and remove the driver.
- 3 Unscrew the cover to loosen the ring.
- 4 Pull out the diffuser and the light source.



 The light source is replaceable by an authorized professional.
For advice contact your Wever & Ducré customer service contact point.



The driver can be replaced by the end user.

This luminaire contains a light source with the corresponding energy class:

colour temperature	Energy class
2700K	A ↑ G E
3000K	A ↑ G D



WEVER & DUCRÉ
LIGHTING

WEVER & DUCRÉ BV

Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com