


ASSEMBLY INSTRUCTIONS

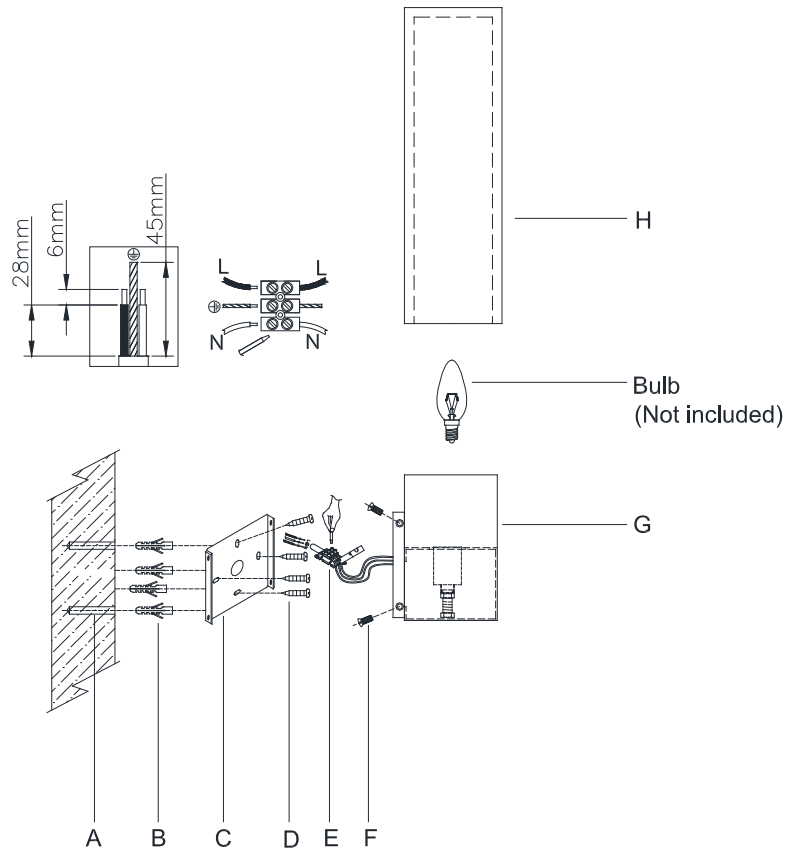

220 Volt Covet Tall Box Bath Sconce

Item # KW 2112-EU

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- Carefully remove all parts from the box.
- Remove the mounting plate (C) from the fixture body (G) by loosening the side screws (F).
- Drill 4 holes (A) on the wall and make sure the hole distance will match to the mounting plate (C) holes.
- Knock the anchors (B) into the wall holes.
- Affix mounting plate (C) onto the wall and secure with mounting screws (D).
- Loosen the screws on the wiring box (E) to fit the wire from your house and the fixture.
- Connect the ground wire (green or yellow) to the wiring box (E).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- Connect the hot wire (BROWN) to the wiring box (E).
- Repeat this procedure for the neutral wire (BLUE).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- Attach the fixture body (G) onto the mounting plate (C) and secure with side screws (F).
- Insert bulb (not included) into the socket.
- Attach the alabaster shade (H) to the fixture body (G).
- Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987