


ASSEMBLY INSTRUCTIONS

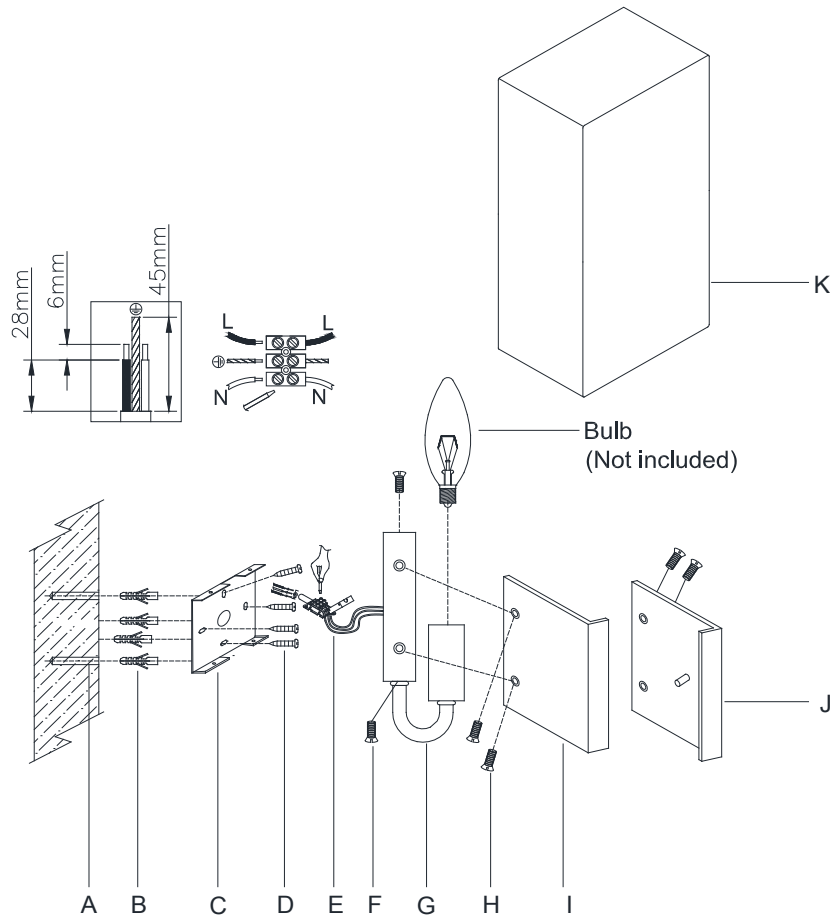

220 Volt Covet Wide Clip Bath Sconce

Item # KW 2115-EU

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Remove the mounting plate (C) from the fixture body (G) by loosening the set screws (F) by wrench provided.
3. Drill 4 holes (A) on the wall and make sure the hole distance will match to the mounting plate (C) holes.
4. Knock the anchors (B) into the wall holes.
5. Affix mounting plate (C) onto the wall and secure with mounting screws (D).
6. Loosen the screws on the wiring box (E) to fit the wire from your house and the fixture.
7. Connect the ground wire (green or yellow) to the wiring box (E).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
8. Connect the hot wire (BROWN) to the wiring box (E).
9. Repeat this procedure for the neutral wire (BLUE).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Attach the fixture body (G) onto the mounting plate (C) and secure with set screws (F) by wrench provided.
11. Insert bulb (not included) into the socket.
12. Attach the alabaster shade (K) to the fixture body (G), tighten it by side plate (I) & (J) with side screws (H).
13. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987