


Step In Wall Brass

Installation instructions

➡ outdoor / recessed wall

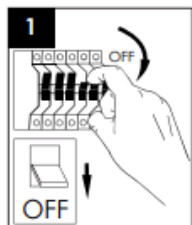

Installation


Make a hole dim: $\varnothing 54 \times 82\text{mm}$ (depth) with a tilt angle.





2 Fit the recessed box into the hole.



3 Make a watertight wiring connection.

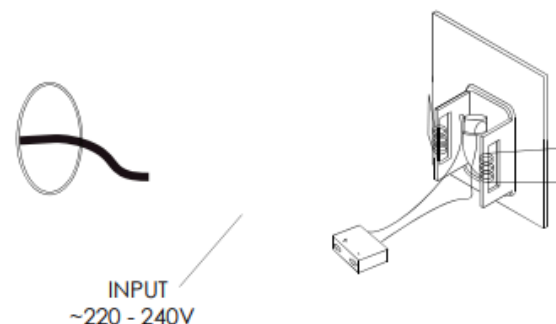

4 Bend the springs and fit the luminaire inside the box.

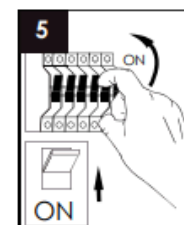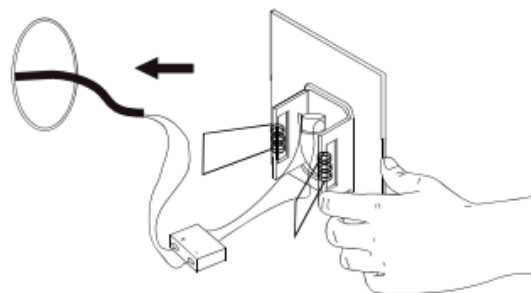

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

CAUTION

Wear anti-static gloves before you touch LED systems




CAUTION

Replace any cracked shield



Installation instructions

Single product connexion

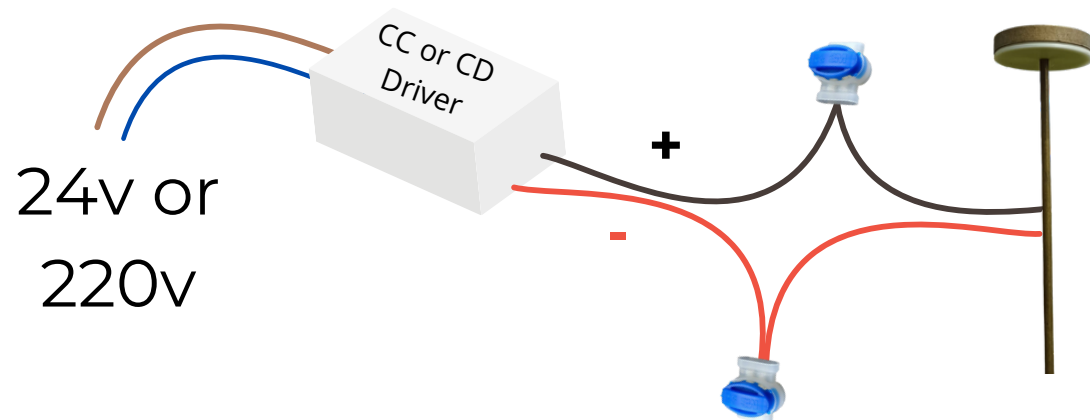

Products wired in series

