


w222 Focal semi recessed Instructions

1.

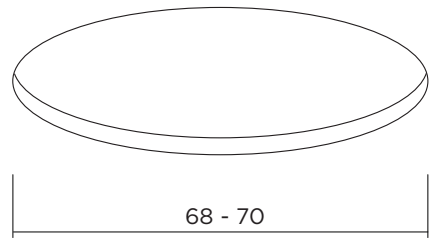


2.

phase cut



DALI

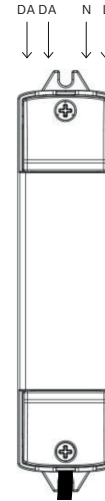

Mounting instructions

1. Make a hole in the ceiling according to the prescribed dimensions.

Cutout diameter: 68-70mm
Ceiling thickness: 2-25mm
Recessed depth: 95mm

2. Connect the wires to the driver.
3. Insert the driver and luminaire in the hole.

3.

