

ROOMOR WALL 3.0

06-Sep-2018

3.0 PAR16

max. 35W | GU10 | 100-240VAC | 50-60Hz
 CE IP20 45°/45° 30°/30°

BODY COLOUR

black texture (Cable Plug with hand switch)
 black texture (Cable base round)

339120B...

339220B...

OPTIONAL

No shade

00

SHADE 1.0

black texture
 black texture + gold
 felt grey (max.15W)

B1

K1



F1

for PAR16 lamps see our catalogue


SHADE 1.0



mount Shade:

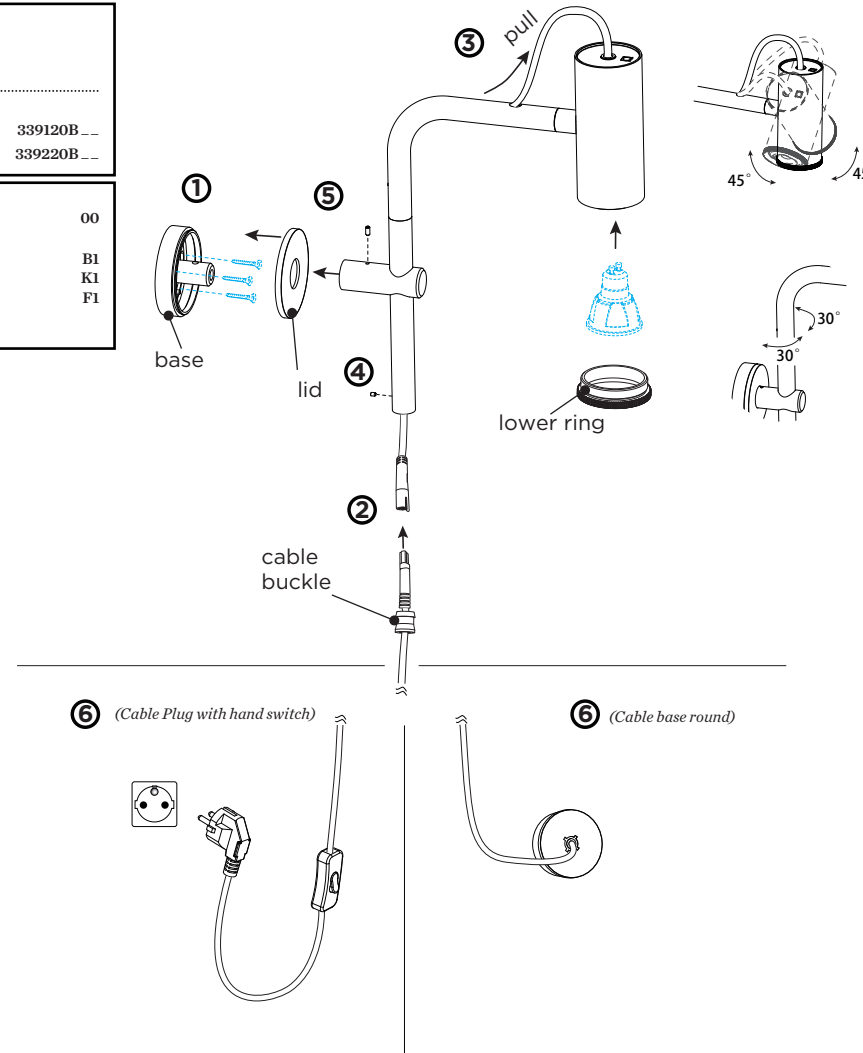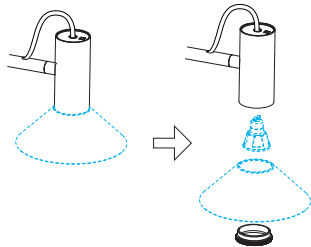

DIMENSIONS

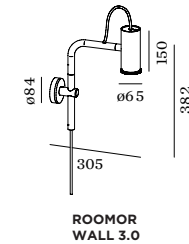

MOUNTING INSTRUCTION

- 1 Open the lid, and mount the base on the wall. and then close the lid by pressing.
- 2 Connect the cable plugs.
- 3 Pull the cable up so that the connected plugs can get into the tube of the luminaire body.
- 4 Put inside by pressing and fix the cable buckle with the allen screw.
- 5 Install the luminaire body on the base and fix it with the allen screw
- 6 for Cable Plug with hand switch:
Power connected with the plug.

for Cable base round:

Mount the round base on the wall

(You have to turn the cover counterclockwise a quarter in order to loosen it from the base and mounting back on is by turning clockwise.)

POWER CONNECTION

Connect the wires
 connection: STANDARD version

