Zapa Ground 3

MODELS COVERED

MODEL	REFERENCE	SIZE	IP
Zapa Ground 3	NT-ZG3-BR	Ø 35 × 37 mm	IP67

TECHNICAL DATA

LOCATION	Outdoor · recessed in a wall
SIZE	Ø 35 × 37 mm
WEIGHT	140 g
HOLE	Ø 29 × 140 mm
BOX	Tube box 29 × 140 mm, with rubber gasket*
LIGHT SOURCE	HP LED, CRI 90 · 1 W or 1.5 W · 150 to 230 lm (2700 / 3000 / 4000 K)
OPTICS	Lens 25° or 40°
DRIVER	350 / 500 mA constant current*
SUPPLY	24 V or ~220–240 V, depending on the driver*
PROTECTION	IP67

* Tube box, driver, power supply and converter not included.

BEFORE YOU START

- Installation must be carried out by a qualified electrician.
- The fixture must be earthed wherever an earth connection point exists.
- Make sure the mains is switched off before any work or servicing.
- After installation, check that the fixture is firmly fixed and that the cable clamps, if any, are well tightened.
- The fixture is not designed for loop-through wiring.
- LED modules are replaced by the manufacturer only.

NOT INCLUDED

- Tube box 29 × 140 mm
- Driver or power supply
- Terminals

Novatrade Lighting accepts no liability for injury or damage resulting from incorrect installation or use.

Caution · Wear anti-static gloves before you touch the LED.


Caution · Replace any cracked shield immediately.

CARE


- The brass is left untreated. It darkens and develops a natural patina outdoors, which protects it; this is not a defect.
- Clean with a soft cloth, dry or slightly damp. Never use abrasives, solvents, metal polish on the lens, or a high-pressure jet.

At the end of its life, do not throw the fixture away with household waste. Take it to a collection point for electrical and electronic equipment (WEEE). Brass is fully recyclable.


Installation

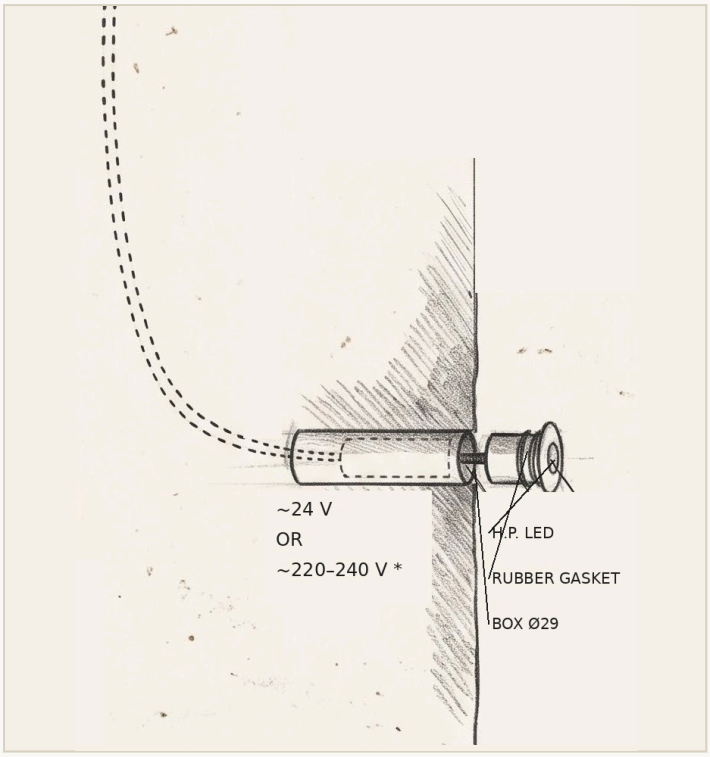

A · Box set in the wall · B · Wiring to the driver

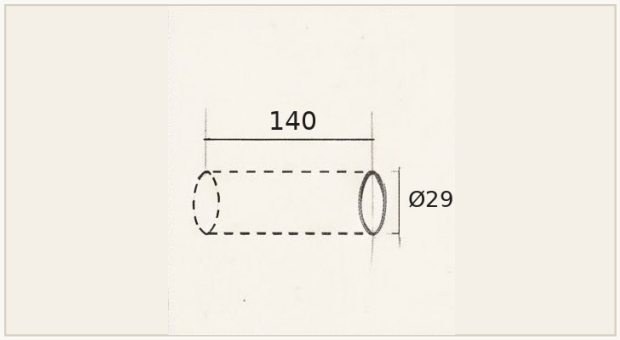

1 · Hole Ø 29 × 140 mm

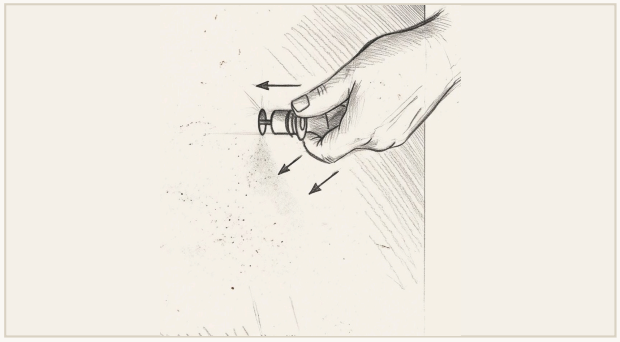

2 · Push the fitting gently into the box

1 SWITCH OFF

Switch off the mains supply before you start.

B CONNECT

Make the wiring connections to the driver, observing polarity: red +, black -. The input is 24 V or ~220–240 V depending on the driver.* See the wiring diagrams below.


A DRILL AND FIT THE BOX

Drill a hole Ø 29 × 140 mm in the wall and fit the tube box, flush with the wall face.


2 PUSH THE FITTING IN

Push the fitting gently into the box, so that the rubber gasket is not displaced. Switch the mains back on.

WIRING

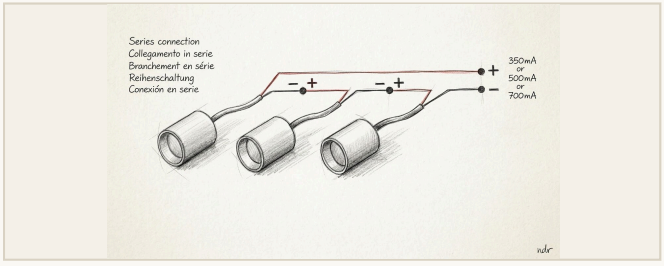

Constant-current driver · in series

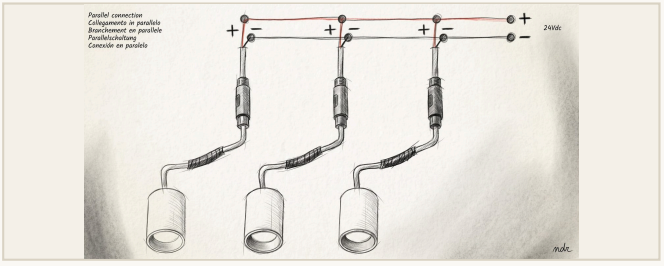

24 V DC · in parallel, one converter per fixture

QUESTIONS ABOUT YOUR INSTALLATION

Novatrade Srl · Chaussée de Louvain 239 · B-1410 Waterloo · info@novatrade.be · www.novatradelighting.com